

Sortimo TopSystem Ford Transit 2014 1000005347 / FOT14B-4P

da-DK

Vigtigt! Læs og forstå den vedlagte sikkerhedsbrochure.

de-DE

Wichtig! Lesen und verstehen Sie die beiliegende Sicherheitsbrochure.

en-EN

Important! Read and ensure that you have understood the enclosed safety brochure.

es-ES

¡Importante! Asegúrese de leer y entender el folleto de seguridad adjunto.

fr-FR

Important ! Lisez attentivement la brochure de sécurité ci-jointe pour bien la comprendre.

no-NO

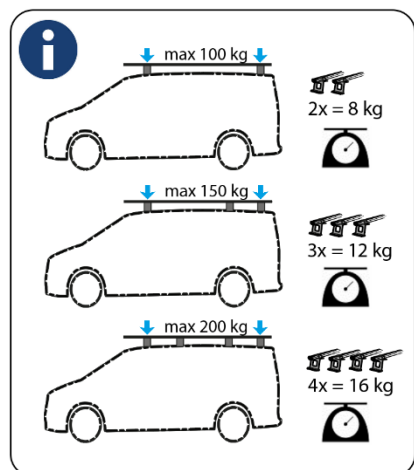
Viktig! Les og forstå den vedlagte sikkerhetsbrosjyren.




nl-NL

Belangrijk: Zorg ervoor dat u de bijgevoegde veiligheidsbrochure hebt gelezen en begrepen.

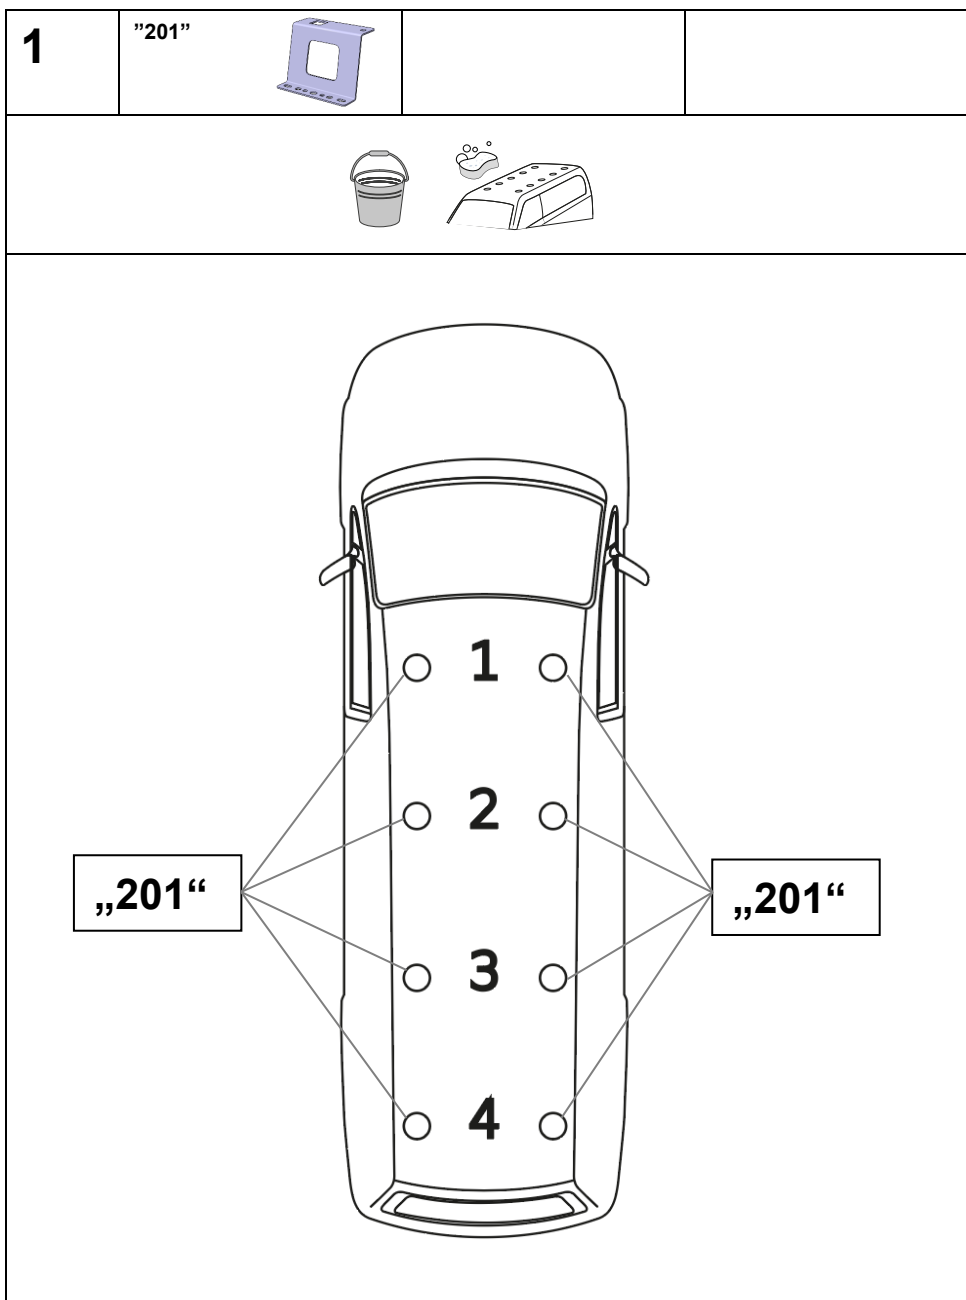
sv-SE


Viktigt! Se till att läsa och förstå den bifogade säkerhetsbroschyren.

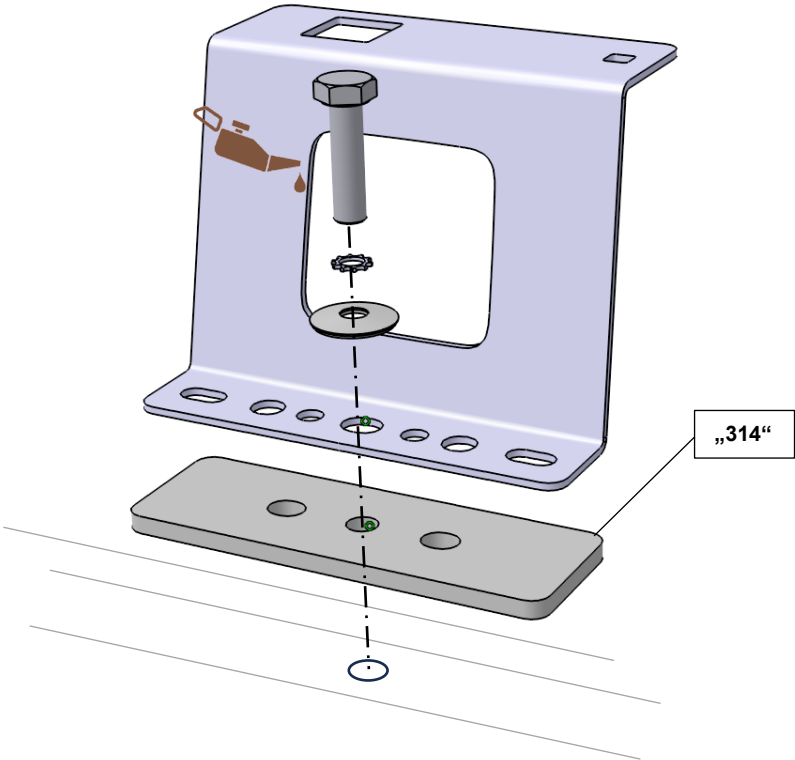


1000005347		
8x 2000017725 	8x 6000003535 M6x16 	8x 6000003960 Ø 18 / Ø 6,4 
8x MT1016364 M6 	8x 2000018146 "201" 	8x 6000014871 "314" 
8x 6000003956 M8x30 	8x 6000003942 Ø 8,4 	8x 6000011037 Ø 22 / Ø 8,4 

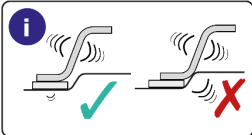
		
		
		
		



2	M8x30 12 Nm 	Ø 8,4 	Ø 22 / Ø 8,4 
			8x 6000014871 "314" 

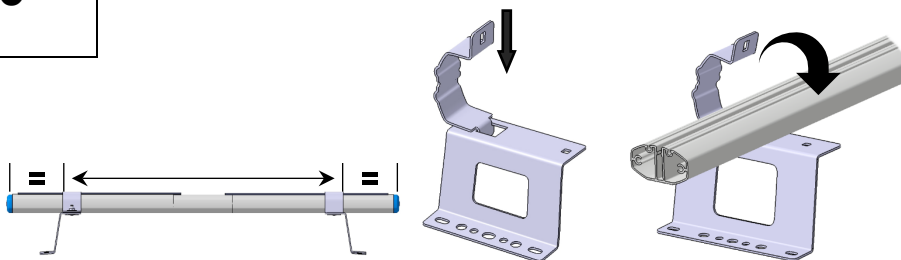


The diagram illustrates the assembly of a bracket labeled "314". A screw is being inserted into a hole in the bracket. A dashed line indicates the alignment of the screw with a hole in the bracket. A callout box points to the bracket with the label "314".



The warning icon shows two scenarios. The left scenario shows a correct installation with a green checkmark. The right scenario shows an incorrect installation with a red X.

3



3.1

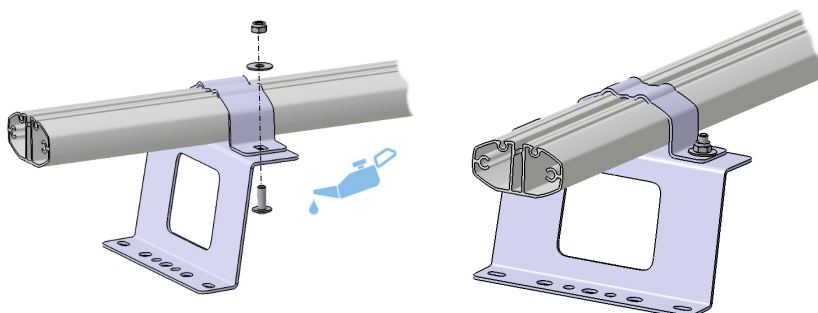
M6x16



Ø 18 / Ø 6,4

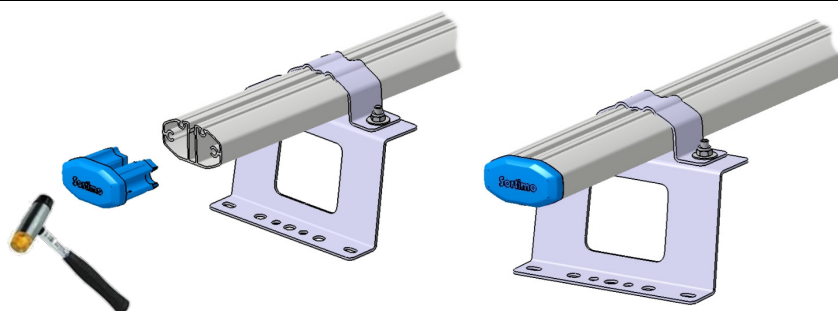


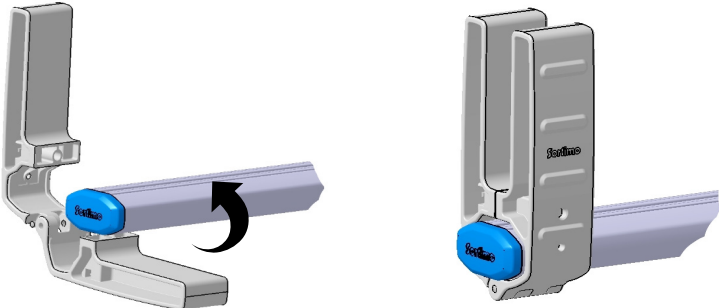
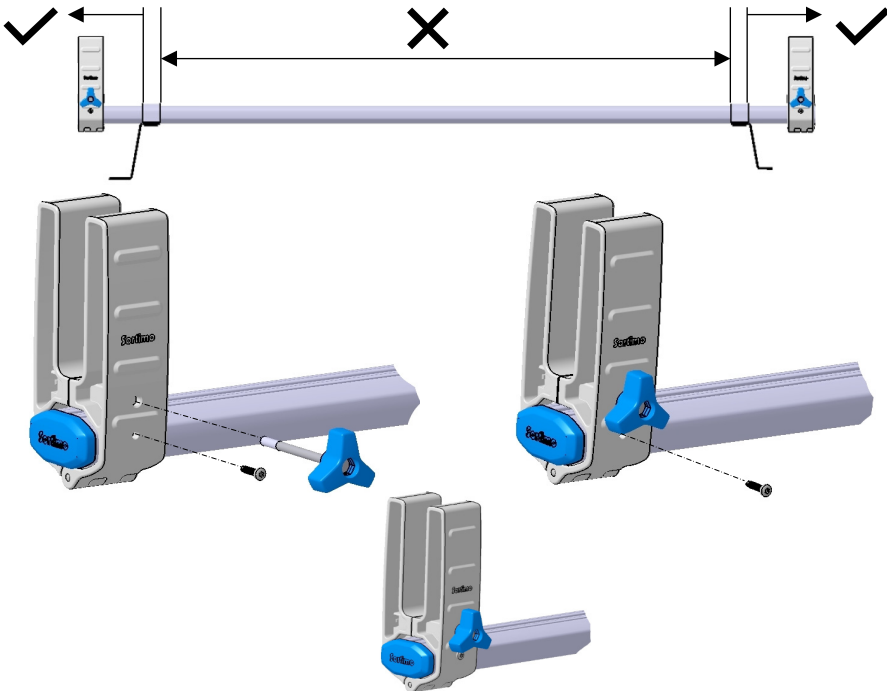
M6
8 Nm

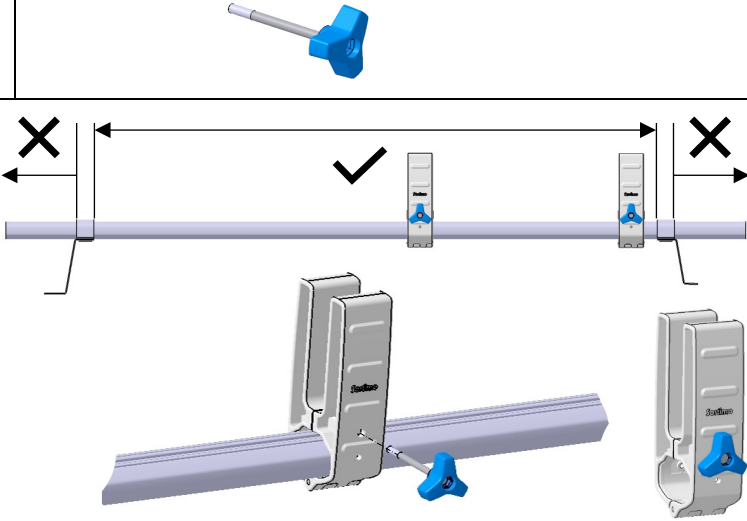
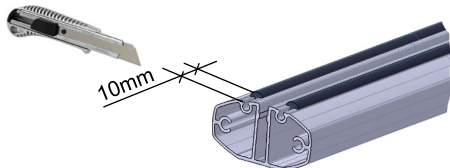


4

6000003819



5	6000015343	
		
5.1	M4,2x19 4 Nm	
		

5.2		
6		
		
6.1	6000011073 M6x16 6 Nm 	
